>>> Portable Air Jacks—A Quick, Convenient for Lifting Needs

- Suggested that working pressure is between 3.5~6.5KG/CM².
- Using EPDM material to maintain product life of at least five years.
- · Air operated, easy to use and light to lift.
- Air bags are all tested by Bursting Strength up to 17 KG/CM², and the fatigue life persists up to one million cycles without failure


>> 可攜帶的氣壓式千斤頂 - 快速方便的舉升

- 可應用於斜度支撐,千斤頂之增高柱,可自行修正調整但角度不可大於10°
- 建議使用壓力3.5~6.5KG/CM²,可確保產品使用年限
- 採用耐老化橡膠壽命長,可達五年以上。
- 體積小,重量輕,附車輪,搬運輕鬆
- 橡膠部分經過爆破試驗17KG/CM²以上,以及疲勞耐久試驗,安全性高

TAIWAN PAT. NO:M537583 M540861

中心柱Psot 高度Hight		Air Jacks Height 干斤頂高度 mm				
		使用前 最低 Before Inflation Min Height	使用中 最高 After Inflation Min Height			
Α	23 _{mm}	94mm	269mm			
В	80 _{mm}	125mm	300mm			
С	130mm	175mm	350mm			
D	180mm	225mm	400mm			

POST柱

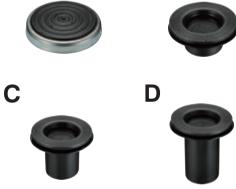

長Length:1050mm 寬Width:300mm

>> Realtionship between Wokring pressure, High and its Loadings

Kgf (Loads) Height Working pressure kg/cm²	Α		В		С		D	
	264mm	110mm	295mm	140mm	345mm	190mm	395mm	240mm
5.5 kg/cm²	760kg	2800 kg	760 kg	2800 kg	760 kg	2800 kg	760 kg	2800 kg
3,5 kg/cm²	430kg	1750 kg	430kg	175 0 kg	430 kg	175 0 kg	430 kg	1750 kg

- **>> Warranty** One-year limited warranty, Warranty service for eligible repairs is available at no charge for twelve months from the date of original retail purchase.
- **>>> After-sales service** The product can be exchanged within seven days if it is faulty when delivered.
- ▶ 產品保固 全新,公司貨品,保固一年。新品於保固期間內免費換修服務。

>>> To operate the YA-AIR air jacks:

- 1. Position vehicle on only solid flat surface and engage its parking brake.
- 2. Chock vehicles front and rear wheels.
- 3. Use the air hose on handle assembly to elevate structural component to desired height.
- 4. To deflate the air jack, remove the air hose from the air jack.
- 5.Do not exceed rated capacity and do not over inflate.

>> 操作流程

- 1.確定車輛在p檔位置,手剎車須作用中,車輛置於平坦之地上。
- 2.使用固安震千斤頂時,安全起見可於另兩輪放置檔板固定車輛,避免車體滑動發生危險。
- 3.使用充氣連接工具夾住充氣氣門嘴(同轎車輪胎之充氣氣門嘴)後,即可開始充氣。
- 4.注意,此時輪胎將漸漸上升,直到離開地面約25MM(1"高度),即可停止再充氣。
- 5.待换修工作完成後,打開排氣閥,即可取出千斤頂。

>> CAUTION To avoid crushing and related injuries Read carefully before use

- 1. Never work on, under or around a load supported only by air jack.
- 2. Visually inspect air jack prior to each use. Do not use if scars, abrasions,
- rips or punctures are detected in the air bag.
- 3.Burst air pressure : Over 17 KG/CM², 235 PSI (16.3 Bar) · Maximum Ioad : 2 ton (2000kg).
- Operating Pressure: 3.5~6.5 kgf/cm²
- 4.void contact with petroleum based products or chemicals of any kind.
- 5. Avoid sharp objects that may puncture air bag.
- 6. Failure to heed these precautions may result in personal injury or property damage.

注意事項 避免人員受傷,請仔細閱讀千斤頂上所貼的注意標籤並遵守規定。

- 1. <mark>務必遵守此項安全規定</mark>,當使用固安震氣壓式干斤頂支撐車輛時,任何人或工具,請勿在車體下方 施工或停留,以避免發生任何意外。
- 2.使用前,請檢查固安震氣壓式干斤頂,橡膠外觀是否有龜裂現象
- 3.當使用内壓壓力超過17KG/CM2,橡膠本體會產生爆破的可能。橡膠本體不會有射出物噴出,不影響維修人員。
- 4.使用內壓範圍請務必依照原廠建議,將不會發生爆破的可能,於橡膠本體結構內有尼龍簾布補強層,其單支引張強度為16KG以上,每英吋(2.54CM)寬,有25知單支尼龍紗佈滿其上。故此使用上非常安全。